



Figure 3.4 LED Light

- After the red LED glows, please enter your new Master Access Code once again and then press and hold the learn button for two seconds again.
- The green LED light will blink green '5' times and the alarm will sound five quick beeps. This confirms your Master Access Code has been accepted.
- If the LED light on the keypad glows RED after you press and hold the learn button for the third time to confirm the access code, an error has occurred and you will need to start the programming process over.

IF THE POWER IS DISCONNECTED FROM THE SAFE FOR MORE THAN ONE MINUTE THE ACCESS CODE WILL REVERT BACK TO THE FACTORY DEFAULT 1 – 2 – 3 – 4.

c. Programming a Second Access Code

- Press the learn button for 2 seconds. The green LED on the top of the keypad will glow steady and you will hear a beep.
- Press the learn button again for 2 seconds. The green LED on the top of the keypad will blink two times and you will hear two beeps.
- Enter a second access code.
- Press and hold the learn button for two seconds. The red led will glow and you will hear two beeps
- Enter the Second Access Code again. Press and hold the learn button for two seconds.
- If the green LED flashes five times and there are five quick beeps the second access code has been accepted.
- If the red Led flashed and error has occurred and you will need to repeat the process for entering a Second Access Code.

d. Programming a Third Access Code

- Press the learn button for 2 seconds and release. The green LED on the top of the keypad will glow steady and you will hear a beep.
- Press the learn button a second time for two seconds and release. The green LED will flash twice and you will hear two beeps.
- Press the learn button a third time for two seconds and release. The green LED will flash three times and then glow steady. You will also hear three beeps.
- Enter a Third Access Code
- Press the learn button for two seconds and release.
- Enter the Third Access Code again.
- Press the learn button for two seconds and release.
- If the green LED flashes five times and beeps five times then the Third Access Code has been accepted.
- If the red LED flashed three times and you hear three soft beeps an error has occurred and you will need to repeat the process for entering a Second Access Code.

e. Temporarily Disabling the Second and Third Access Codes

- Press the learn button for two seconds and release. The green LED will glow and you will hear one beep.
- Press the learn button a second time for two seconds and release. The green LED will blink twice and you will hear two beeps.
- Press the learn button a third time for two seconds and release. The green LED will flash three times and you will hear three beeps.
- Press the learn button a fourth time for two seconds and release. The green LED will flash four times and you will hear four beeps. The green LED will glow steady.
- Enter the Master Access Code.
- Press the learn button for two seconds and release. The green LED will turn off.
- The Second and Third Access Codes are now disabled.
- To enable the Second and Third Access Codes to work again simply repeat the process above.

f. Erasing the Second and Third Access Codes

- Press the learn button six times for two seconds each time. On the sixth time the green LED will flash six times and glow steady.
- Press buttons 1 and 4 at the same time for five seconds.
- When the green LED goes out the Second and Third Access Codes are permanently erased.

3 SETTING THE ALARM

If the Alarm option is armed, shock, vibration or motion of any kind may trigger the alarm. If the alarm is set off, 25 short audible ticks will sound, followed by an alarm sound for two minutes. If there is continued vibration or movement the alarm will continue to sound until the alarm is disarmed. To turn off the alarm simply enter a valid access code. To arm the alarm follow the process below.

- Press buttons 1 and 4 at the same time for five seconds. Release the buttons after the green LED flashes.
- The red LED will then flash 10 times and you will hear ten beeps.
- The Alarm is now armed.

Setting the Alarm Sensitivity

- To adjust the sensitivity of the alarm press and hold the learn button five times for two seconds each time. The green LED will blink five times and you will hear five beeps. Then the green LED will glow.
- While the green LED is glowing please use the buttons on the keypad to adjust the sensitivity level.
 - o 1 – low
 - o 2 – low/medium
 - o 3 – medium/high
 - o 4 – high